



PIEZAS DE RECAMBIO SUR-RON

FIGURE-01

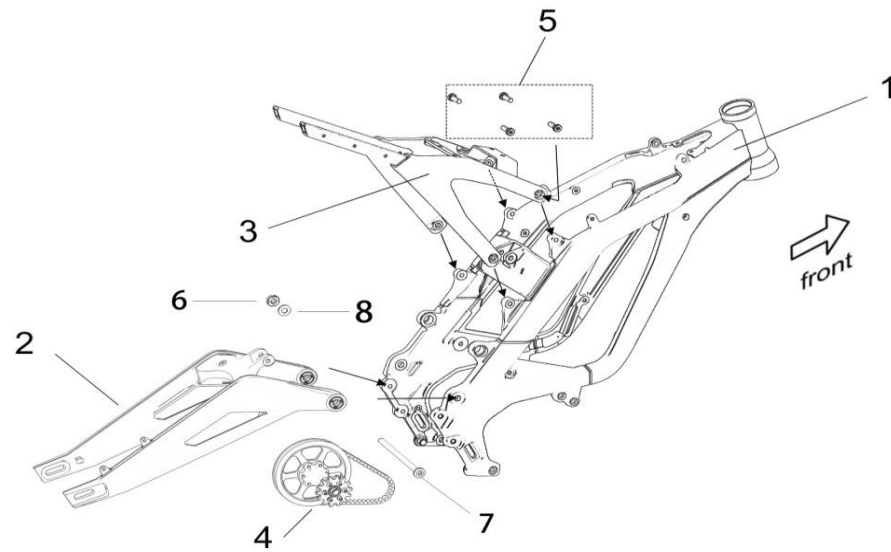


Item	Description (EN)
1_01	Frame Assy.
1_02	Rear Fork Assy.
1_03	Seat Frame Assy.
1_04	Mid. Shaft Bush Assy.
1_05	Screw (M8*20)
1_06	Nut (M10*1.0)
1_07	Rear Fork Mid. Shaft
1_08	Washer (Φ10-Φ20-2)

FIGURE-02

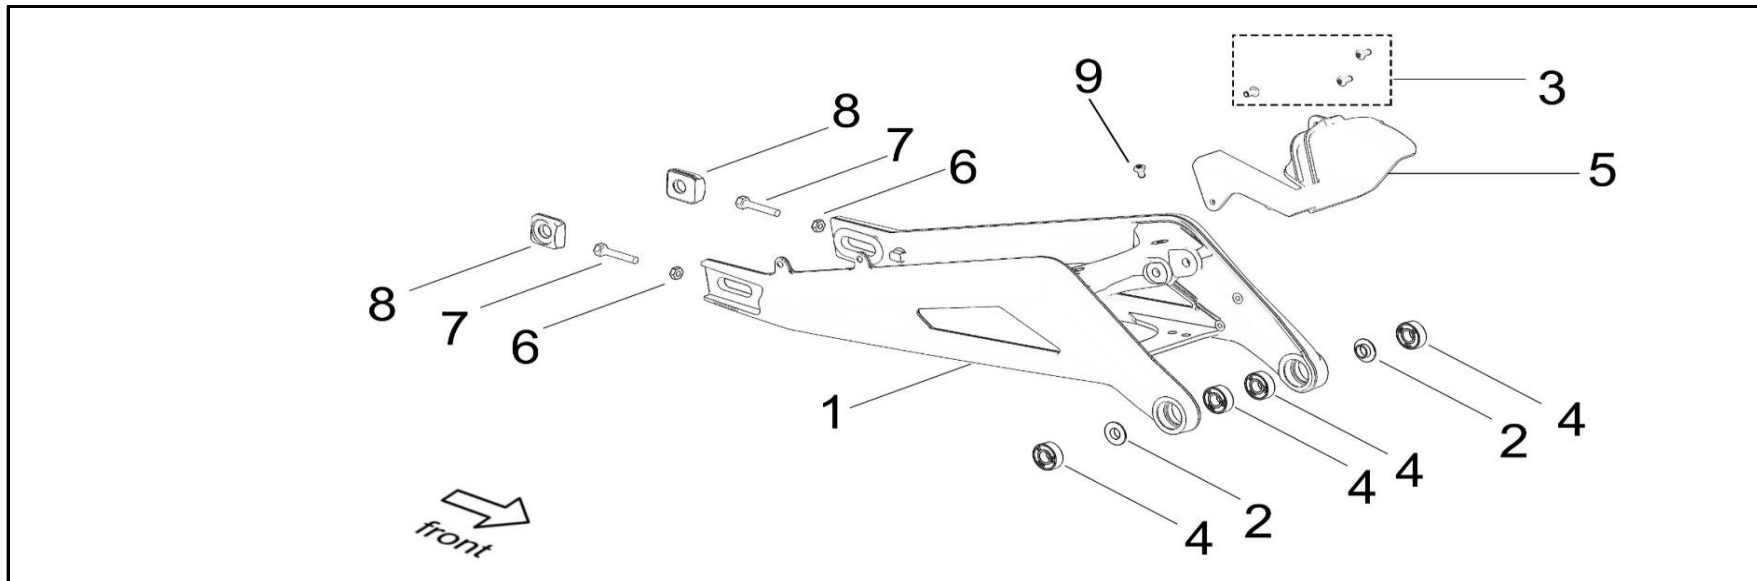


Item	Description (EN)
2_01	Rear Fork Assy.
2_02	Washer ($\Phi 10 * \Phi 15 * \Phi 22-2$)
2_03	Screw (M5*10)
2_04	Rear Fork Bearing
2_05	Protection Cover, Mid. Shaft
2_06	Tensioner Adjust Nut (M6)
2_07	Tensioner Adjust Bolt (M6*35)
2_08	Tensioner
2_09	Wire Clip Fixing Screw (M5*10)

FIGURE-03

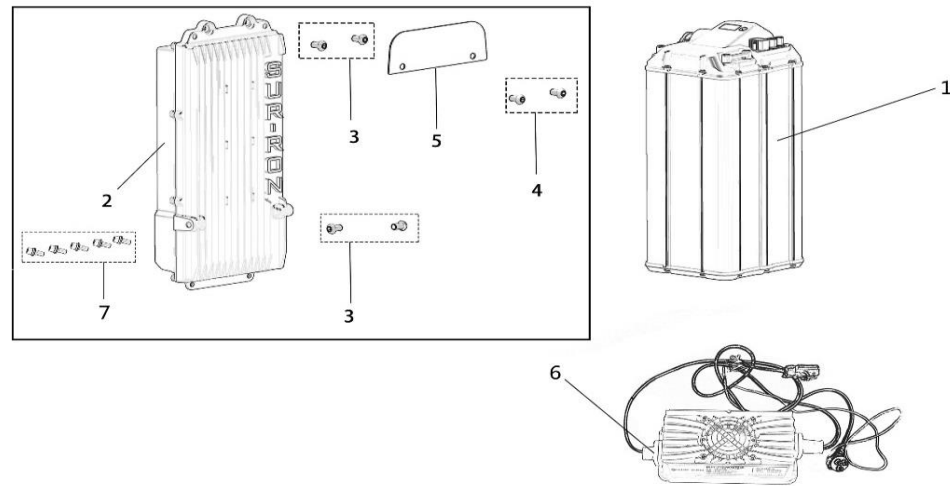


Item	Description (EN)
3_01	Lithium Battery (60V/32Ah)
3_02	Controller
3_03	Screw (M6*10)
3_04	Screw (M5*10)
3_05	Controller Upper Decoration Plate
3_06	Charger 67.2V-10A
3_07	Screw (M6*16)

FIGURE-04

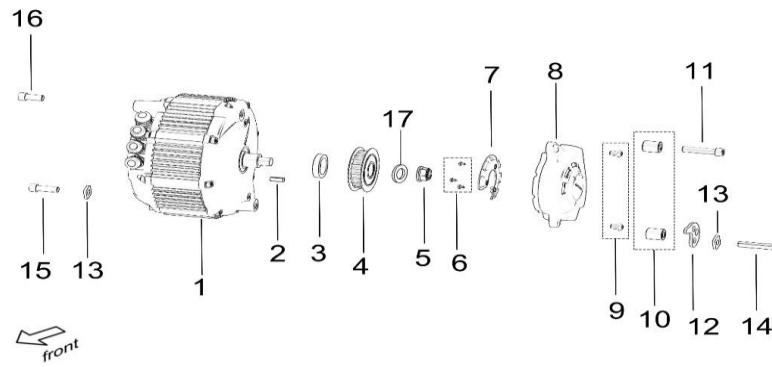

Item	Description (EN)
4_01	Motor Assy.
4_02	Oil Seal
4_03	Plain Circular Bond (5*5*16mm)
4_04	Fr. Belt Pulley
	1st Transmission Sprocket 1 (13T)
4_05	Locknut (M12*1.25)
4_06	Screw (PB3.5*6)
4_07	Bush, Fr. Belt Pulley Protection Cover
4_08	Protection Cover, Fr. Belt Pulley
4_09	Bolt (M6*10)
4_10	Motor Left Mounting Bush
4_11	Bolt (M8*40)
4_12	Motor Position Adjuster
4_13	Motor Position Adjuster Pressure Plate
4_14	Bolt (M8*45)
4_15	Bolt (M8*20)
4_16	Bolt (M8*20)
4_17	Washer (Φ24*Φ10*1.6-3)


FIGURE-05

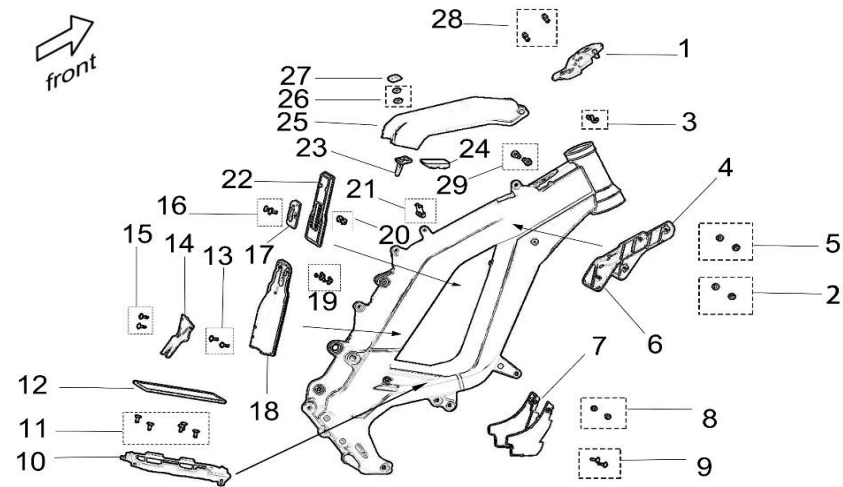

Item	Description (EN)
5_01	Decoration Cover, Electric Lock
5_02	Screw (M5*10)
5_03	Split Damping Ring (Inner Dia. $\Phi 5$)
5_04	Battery Left Limitation Stop (Plastic)
5_05	Screw (M5*10)
5_06	Battery Right Limitation Stop (Plastic)
5_07	Controller Lower Decoration Cover
5_08	Screw A (M6*10)
5_09	Screw B (M4*13)
5_10	Battery Lower Limitation Stop (Plastic)
5_11	Screw (M5*12)
5_12	Battery Lower Buffer Foam
5_13	Screw (M4*13)
5_14	Small Fender, Belt Pulley (Plastic)


5_15	Screw (M4*13)
5_16	Screw (M5*16)
5_17	Back Up Block (Plastic)
5_18	Rear Fender, Battery (Plastic)
5_19	Screw (M6*12)
5_20	Nut (M5)
5_21	Screw (M6*12)
5_22	Fr. Damping Rubber Washer, Battery
5_23	Lock Bracket Hook, Battery
5_24	Buffer Rubber, Battery Compartment Cover
5_25	Battery Compartment Cover (Plastic)
5_26	Nut (M6)
5_27	Decoration Label, Battery Compartment
5_28	Screw (M6*12)
5_29	Pin, Battery Compartment Cover

FIGURE-06

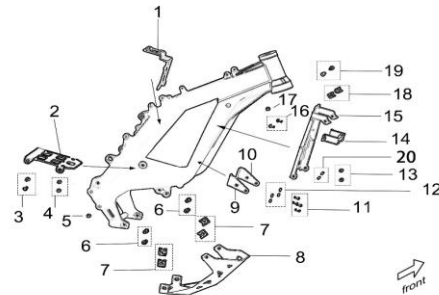


Item	Description (EN)
6_01	Rear Back Up Block, Battery
6_02	Lower Back Up Block, Battery
6_03	Screw A (M6*16)
6_04	Screw B (M6*10)
6_05	Motor Position Adjuster Limitation Pin (M6*14)
6_06	Screw (M8*20)
6_07	Clip (M8)
6_08	Motor Protection Cover
6_09	Lower Right Mounting Bracket, Controller
6_10	Lower Left Mounting Bracket, Controller
6_11	Screw (M6*10)
6_12	Washer (Φ6)
6_13	Screw (M6*12)
6_14	Upper Mounting Bracket, Controller
6_15	Front Fender, Battery
6_16	Screw (M6*12)
6_17	Screw (M5*10)
6_18	Clip (M6)
6_19	Screw (M6*16)
6_20	Spring Washer

FIGURE-07

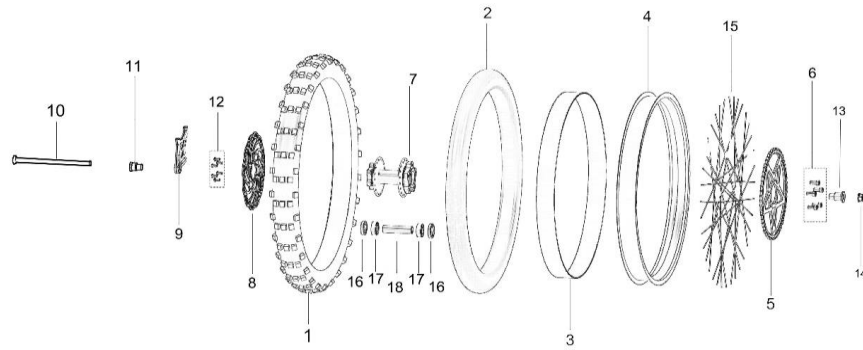


Item	Description (EN)
7_01	Rear Tire
7_02	Rear Inner Tube
7_03	Rim Band
7_04	Rear Rim
7_05	Sprocket (48T)
7_06	Screw (M8*16)
7_07	Rear Wheel Hub
7_08	Rear Brake Disc
7_09	Rear Brake Clip Bracket
7_10	Rear-Wheel Axle
7_11	Rear-Wheel Left Setback Bushing
7_12	Screw (M6*13)
7_13	Rear-Wheel Right Setback Bushing
7_14	Nut (M12*1.25)
7_15	Spoke Assy.
7_16	Oil Seal (Φ20-Φ37-7)
7_17	Bearing (Φ15*Φ35*11)
7_18	Rear-Whel Hub Inner Bushing

FIGURE-8

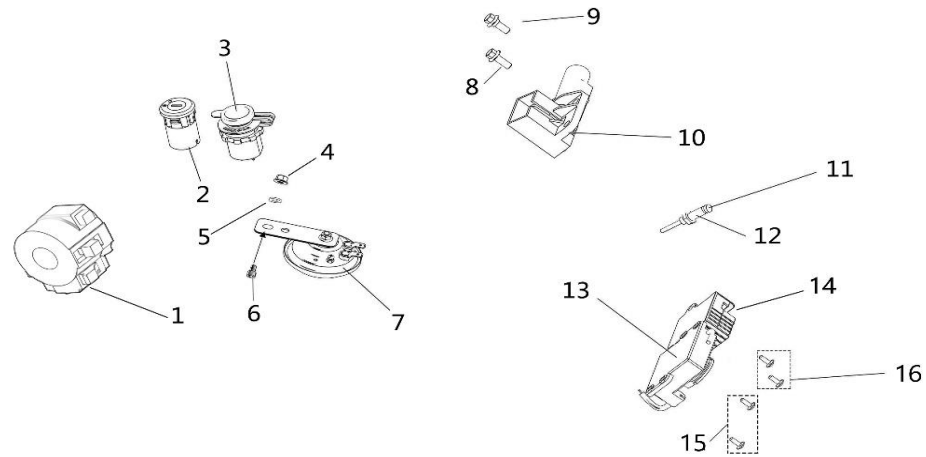


Item	Description (EN)
8_01	Left Combination Switch
8_02	Electric Lock
8_03	USB Interface
8_04	Nut (M6)
8_05	Plain Washer (Φ6)
8_06	Screw (M6*16)
8_07	Horn
8_08	Screw A (M6*16)
8_09	Screw B (M6*16)
8_10	Battery Compartment Lock
8_11	Magneto Sensor, Side Stand Stop Switch
8_12	Side Stand Stop Switch
8_13	Acceleration Controller
8_14	Converter Assy.
8_15	Screw (M4*13)
8_16	Screw (M4*13)

FIGURE-9

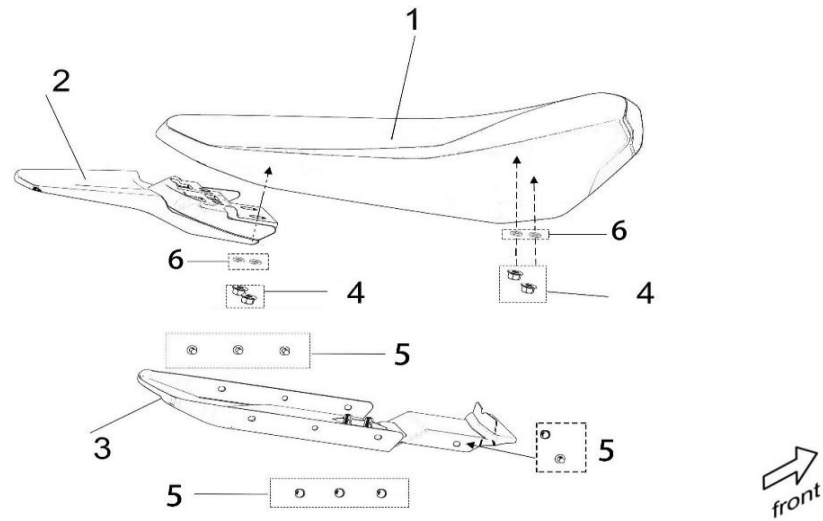


Item	Description (EN)
9_01	Seat (Plastic)
9_02	Rear Fender (Plastic)
9_03	Rear Fender Inner Plate (Plastic)
9_04	Nut (M6)
9_05	Screw, Rear Fender Inner Plate
9_06	Plain Washer (Φ6)

FIGURE-10

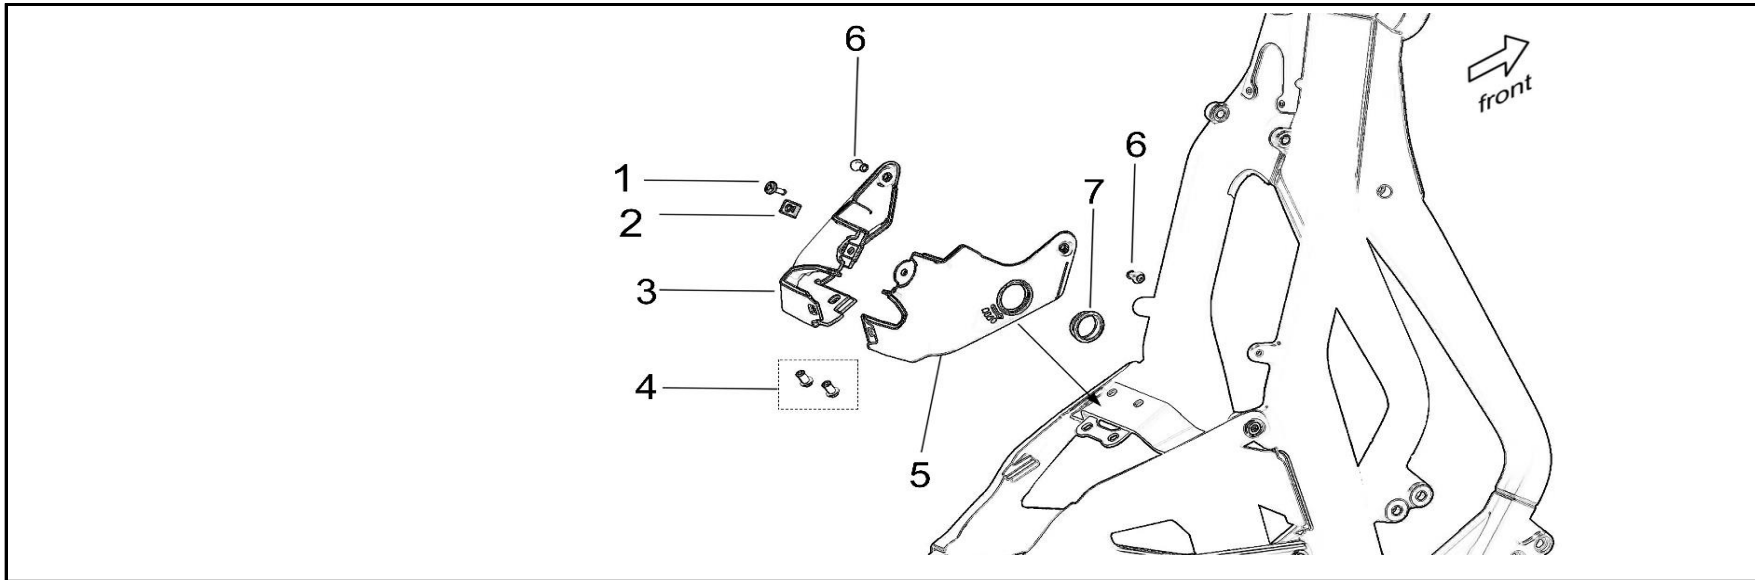


Item	Description (EN)
10_01	Screw (ST4.2*13)
10_02	Clip (M4)
10_03	Left Decoration Cover, Battery Lock Bracket (Plastic)
10_04	Screw B (M6*12)
10_05	Right Decoration Cover, Battery Lock Bracket (Plastic)
10_06	Screw A (M6*10)
10_07	Decoration Ring, Battery Compartment Lock

FIGURE-11

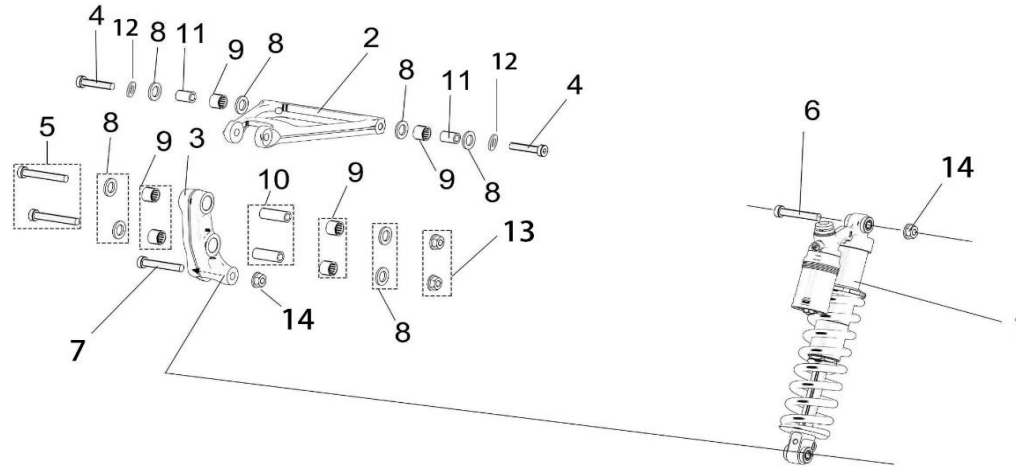


Item	Description (EN)
11_01	Rear Absorber (DNM)
11_02	Rear Absorber Connection Rod
11_03	Rear Absorber Rock Arm
11_04	Bolt (M8*35)
11_05	Rear Absorber Rock Arm Mounting Axle (Half-Thread L55-M8)
11_06	Screw (Half-Thread L50-M8)
11_07	Screw (Half-Thread L45-M8)
11_08	Nylon Washer (Φ12-Φ20-2)
11_09	Rock Arm Bearing
11_10	Rock Arm Bushing
11_11	Connection Rod Bushing
11_12	Plain Washer (Φ8)
11_13	Nut (M8)
11_14	Nut (M8)

FIGURE-12

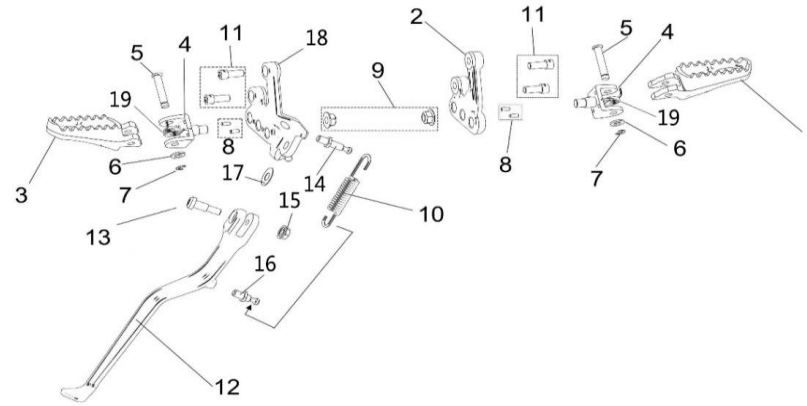

Item	Description (EN)
12_01	Right Foot Peg
12_02	Right Foot Peg Bracket
12_03	Left Foot Peg
12_04	Left Foot Peg Bracket
12_05	Foot Peg Mounting Pin
12_06	Foot Peg Plain Washer (Φ8)
12_07	Foot Peg Clip Spring Reed (Inner Dia. Φ6)
12_08	Position Pin (Φ4*12)
12_09	Nut (M10*1.25)
12_10	Side Stand Bracket Spring
12_11	Screw (M8*20)
12_12	Side Stand
12_13	Screw (M8*30)
12_14	Side Stand Spring Pin A
12_15	Nut (M8)
12_16	Side Stand Spring Pin B
12_17	Washer (Φ24*Φ10-0.5)
12_18	Left Foot Peg Bracket
12_19	Foot Peg Return Spring


FIGURE-13

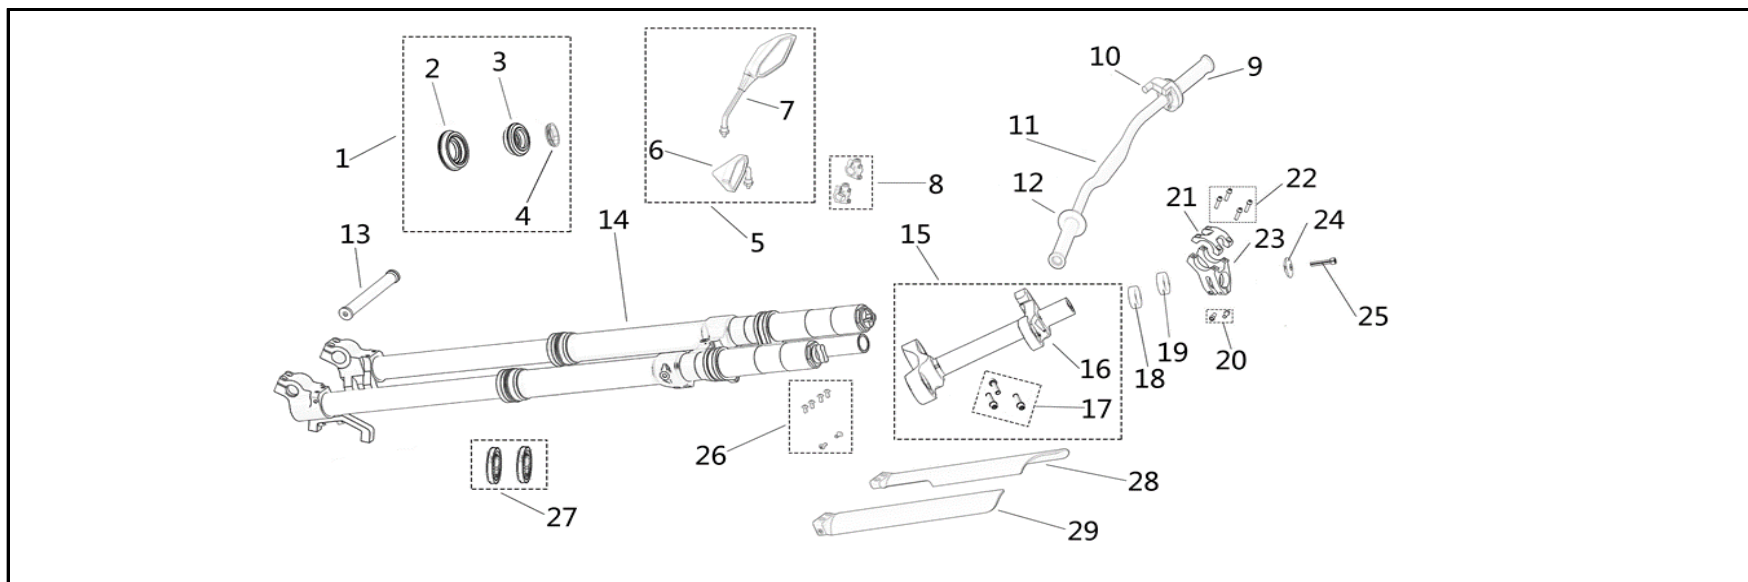

Item	Description (EN)
13_01	Headset Assy.
13_02	Lower Headset, Steering Stem
13_03	Upper Headset, Steering Stem
13_04	Split Snap Ring
13_05	Rear View Mirror Set
13_06	Left Rear View Mirror
13_07	Right Rear View Mirror
13_08	Rear View Mirror Bracket
13_09	Right Handle Grip
13_10	Right Throttle Bracket
13_11	Steering Bar
13_12	Left Handle Grip
13_13	Front Wheel Axle Assy (DNM)
13_14	Front Absorber Assy. (DNM)
13_15	Steering Stem Assy.
13_16	Upper Connecting Plate, Steering Stem (DNM)


13_17	Lock Screw (DNM-M5*14)
13_18	Handle Bar Stem Washer
13_19	Handle Bar Stem Washer (DNM)
13_20	Handle Bar Stem Lock Screw (M6*18)
13_21	Cap, Handle Bar Stem
13_22	Handle Bar Lock Screw (M5*18)
13_23	Bracket, Handle Bar Stem
13_24	Lock cap, Handle Bar Stem
13_25	Decoration Screw Kit, Headset
13_26	Mounting Screw, Absorber Protection Plate (DNM)
13_27	Front Absorber Seal Assy.
13_28	Absorber R. Protection Plate (DNM)
13_29	Absorber L. Protection Plate (DNM)

FIGURE-14

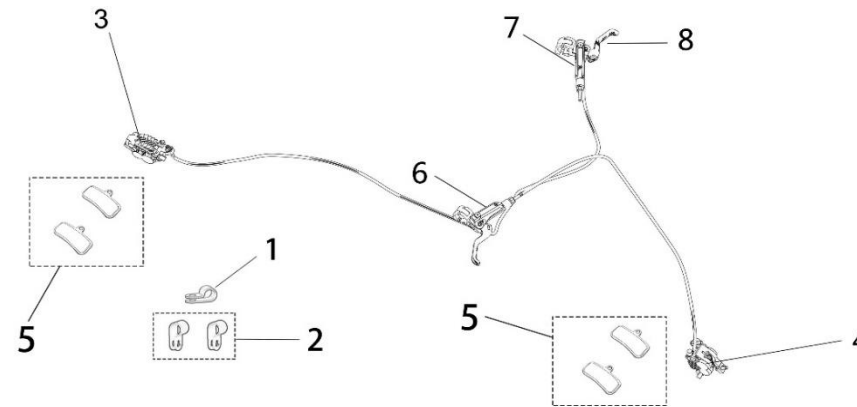


Item	Description (EN)
14_01	Nylon Wire Clip 2
14_02	Nylon Wire Clip 1
14_03	Rear Brake Clip Assy.
14_04	Front Brake Clip Assy.
14_05	Brake Shoe
14_06	Front Brake Pump Assy.
14_07	Rear Brake Pump Assy.
14_08	Brake Lever

FIGURE-15

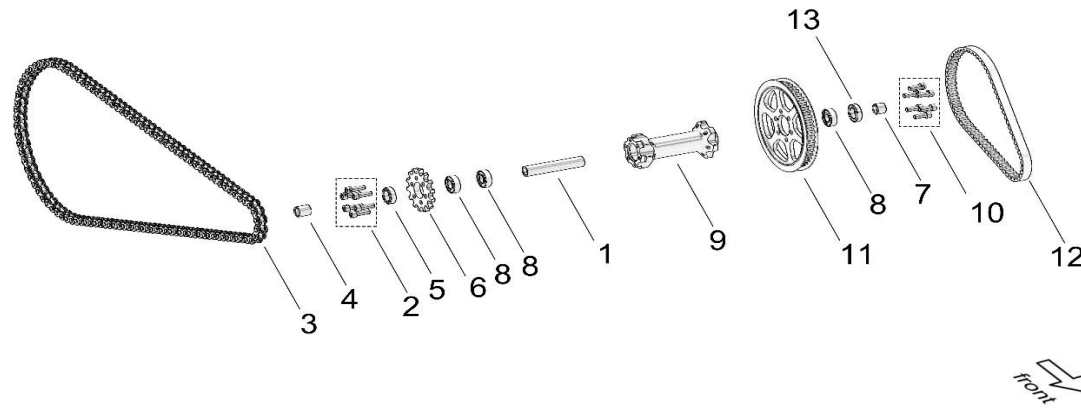


Item	Description (EN)
15_01	Mid. Bushing, Intermediate Shaft Sleeve
15_02	Screw (M6*25)
15_03	Chain
15_04	R. Bushing, Intermediate Shaft
15_05	R. Oil Seal, Intermediate Shaft Sleeve
15_06	Sprocket, Output Shaft
15_07	L. Bushing, Intermediate Shaft
15_08	Bearing, Intermediate Shaft Sleeve
15_09	Intermediate Shaft Sleeve
15_10	Screw (M6*16)
15_11	Rear Belt Pulley
15_12	Belt
15_13	L. Oil Seal, Intermediate Shaft Sleeve

FIGURE-16

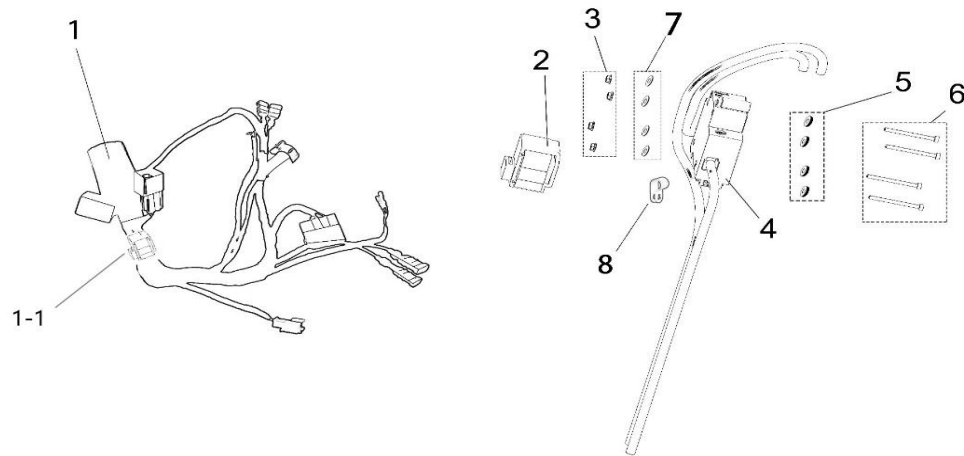


Item	Description (EN)
16_01	Main Wire Assy.
16_01-01	Flasher
16_02	Dump Sensor
16_03	Nut (M3)
16_04	Single - Phase Circuit Breaker
16_05	Isolation Washer (Φ7*Φ3.2*5)
16_06	Screw (M3*40)
16_07	Washer (Φ4)
16_08	Nylon Clip 3

FIGURE-17

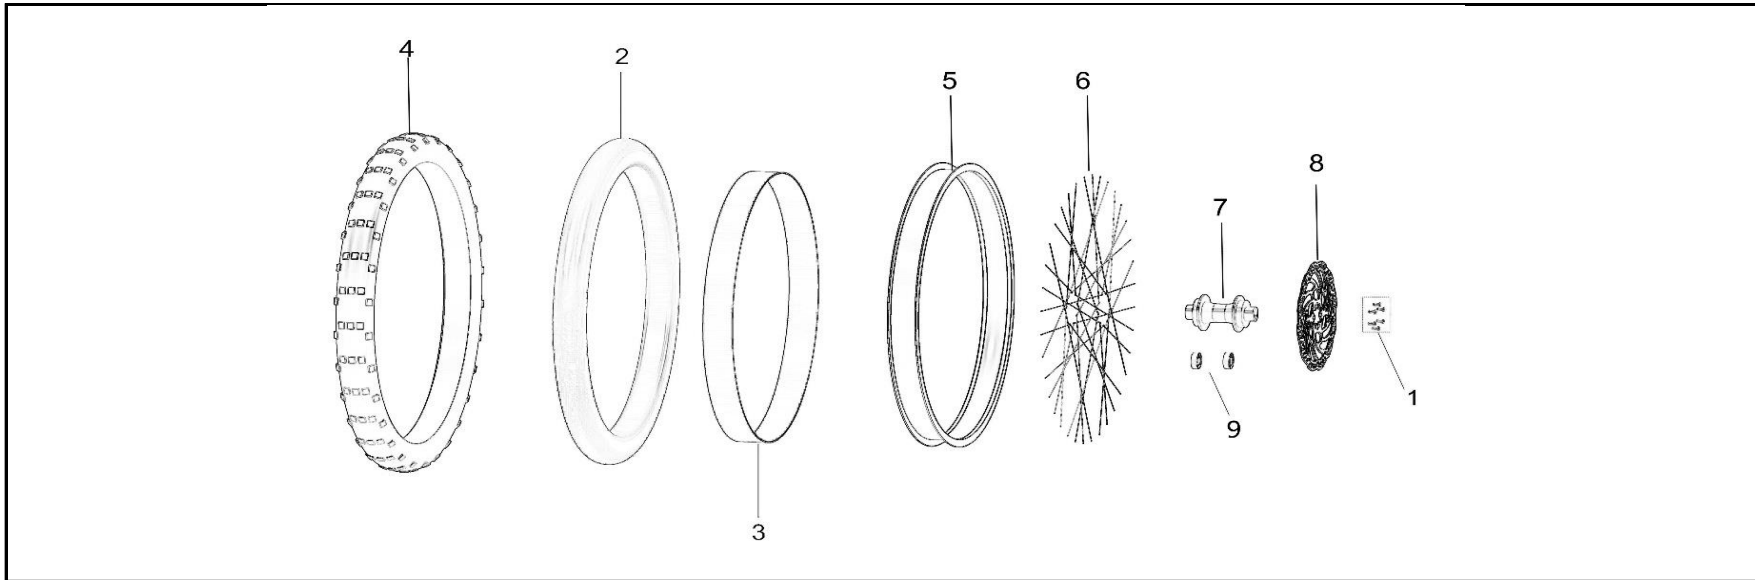


Item	Description (EN)
17_01	Screw (M5*10)
17_02	Front Inner Tube
17_03	Rim Band
17_04	Front Tire
17_05	Front Rim
17_06	Spoke Assy.
17_07	Front Wheel Hub Assy.
17_08	Front Brake Disc
17_09	Front Wheel Bearing (Φ20*Φ32*7)

FIGURE-18

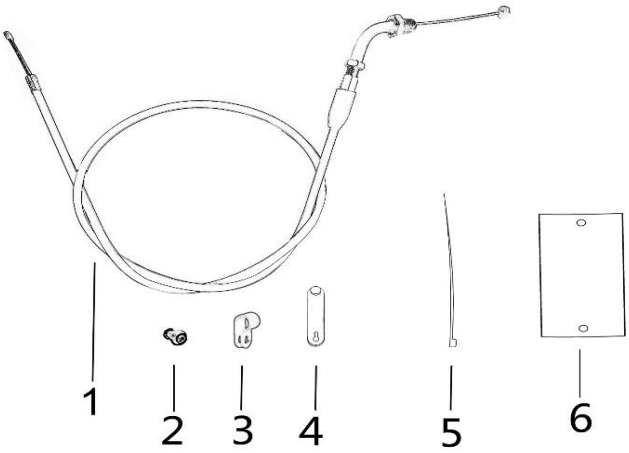


Item	Description (EN)
18_01	Throttle Cable
18_02	Screw (M5*8)
18_03	Nylon Wire Clip 2
18_04	Rubber Strip
18_05	Wire Fixing Strip
18_06	

FIGURE-19

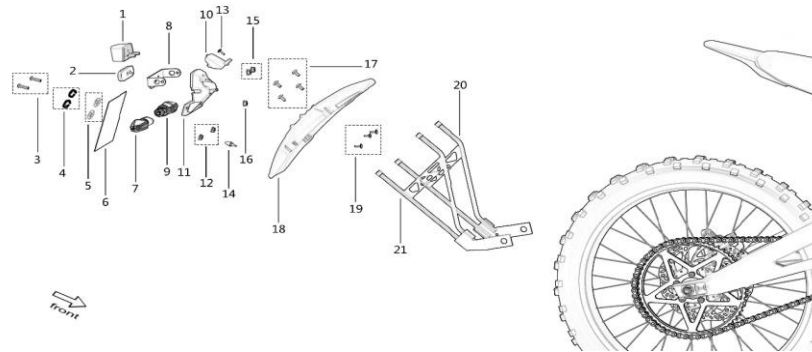

Item	Description (EN)
19_01	Tail Lamp
19_02	Rear Reflector
19_03	Screw (M6*12)
19_04	Spring Washer (Φ6)
19_05	Plain Washer (Φ6)
19_06	Rear Billboard
19_07	Rear Right Turning Light
19_08	Mounting Bracket, Rear Turning Light
19_09	Rear Left Turning Light
19_10	Cover Plate, Tail Lamp Bracket
19_11	Tail Lamp Bracket
19_12	Nut (M6)
19_13	Screw (M4*13)
19_14	Support Rubber, Rear Lisence Plate
19_15	Nut (M6)
19_16	Fixing Nut (M6)
19_17	Screw (M6*12)
19_18	Rear Fender (Rear Wheel)
19_19	Screw (M4*13)
19_20	R. Mounting Bracket, Rear Fender
19_21	L. Mounting Bracket, Rear Fender


FIGURE-20

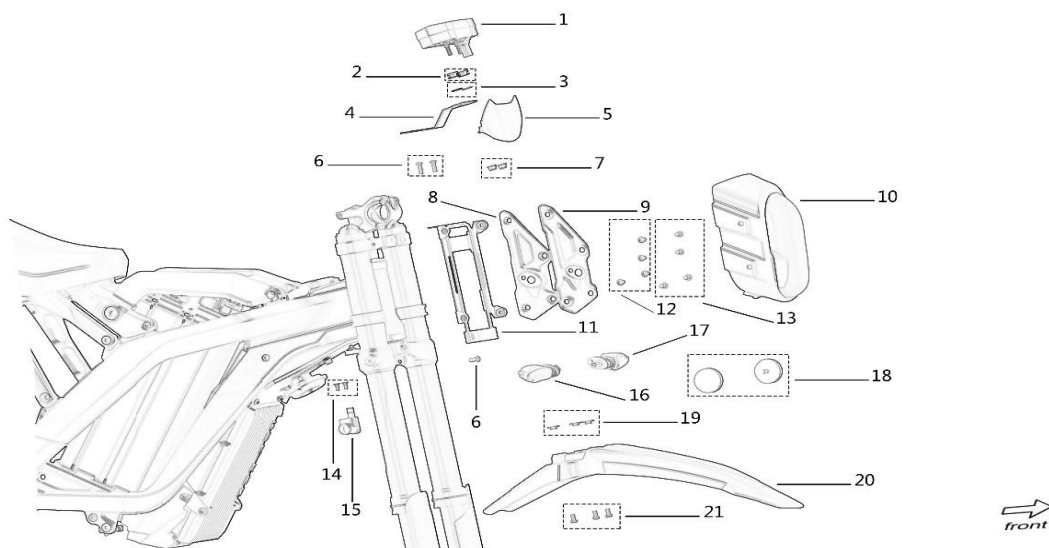

Item	Description (EN)
20_1	Speedometer
20_2	Speedometer Buffer Rubber Washer
20_3	Speedometer Mounting Washer
20_4	Speedometer Bracket
20_5	Speedometer Cover
20_6	Screw (M6*16)
20_7	Fixing Nut (M6)
20_8	R. Protection Plate, Head Light
20_9	L. Protection Plate, Head Light
20_10	Head Light Assy.
20_11	Bracket Assy., Head Light
20_12	Fr. Turning Light Protection Plate Fixing Screw (M6*12)
20_13	Head Light Mounting Screw (M6*12)
20_14	Steering Lock Mounting Screw (M5*12)

20_15	Steering Lock
20_16	Fr. R. Turning Light
20_17	Fr. L. Turning Light
20_18	Side Reflector
20_19	Front Fender Mounting Bushing
20_20	Front Fender
20_21	Front Fender Mounting Screw

FIGURE-21

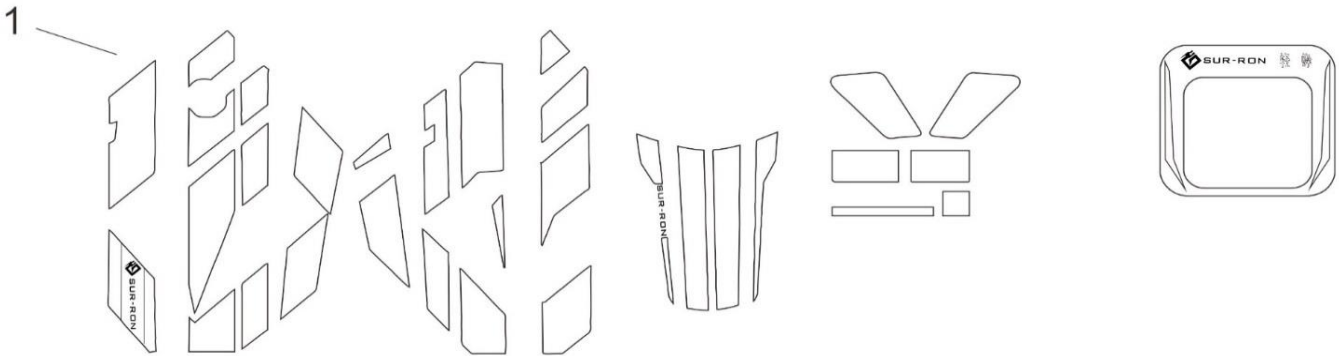

Item	Description (EN)
21_1	Sticker